

GR DIGITAL II New Functions

Thank you for purchasing the GR DIGITAL II. This booklet explains functions that have been added to the included "GR DIGITAL II Camera User Guide". Page references refer to the "GR DIGITAL II Camera User Guide".

1 Switching shooting modes in my settings mode

You can switch shooting modes in my settings mode (P.86) without turning the mode dial.

1 Turn the mode dial to MY1 or MY2.

- The symbol for the shooting mode registered for [Reg. My Settings] appears.

2 Display the shooting menu.

3 Press the ▼ button to select [Switch Shooting Mode] and press the ► button.

4 Press the ▲▼ buttons to select the desired setting.

5 Press the MENU/OK button.

- The shooting mode switches and the shooting mode symbol appears on the screen.



Note-----

This setting can be displayed only when the mode dial is set to MY1/MY2. However, when [Reg. My Settings] is set to scene mode, [Switch Shooting Modes] will not be displayed even when MY1/ MY2 is selected.

2 Magnified Playback Using Up-down Dial/ADJ Lever

During playback mode, not only the Q (Enlarged View) button, but the up-down dial can be used to enlarge images. In addition, by pressing the ADJ. lever to the left or right, with the image enlarged you can display the previous image, or the next image.

1 Press the ► (Playback) button.

- The last shot taken is displayed.

2 Press the ▲▼◀▶ buttons to display the still image you want to magnify.

3 Press the Q (Enlarged View) button, or turn the up-down dial.

- The still image will display enlarged.
- By pressing the ADJ. lever to the left or right with the image enlarged, the previous image or the next image will display enlarged.

Note-----

By pressing the ADJ. lever to the left or right with the image enlarged, movies, S-Cont or M-Cont images will display at actual size.



* L 7 4 4 2 9 1 1 *

3 [LevelSound] in [Operation Sounds]

From the 5 operation sounds (☞ P.171), only the level sound and beep sound can be set to emit.

1 Display the setup menu.

2 Press the ▼ button to select [Operation Sounds] and press the ► button.

3 Press the ▲▼ buttons to select [LevelSound].

4 Press the MENU/OK button, or press the ◀ button and then the MENU/OK button.



4 [On]/[Off] for the [Power Button Lamp]

When the power is turned on, you can now make a setting to light the power button lamp or not. At the time of purchase, it is set to [On] (the power button lamp lights when the camera is turned on).

1 Display the setup menu.

2 Press the ▼ button to select [Power Button Lamp] and press the ► button.

3 Press the ▲▼ buttons to select the desired setting.

4 Press the MENU/OK button, or press the ◀ button and then the MENU/OK button.

